


Installation Instructions

5060XY Outdoor Basketball Backstop by Progressive

Please Note: These instructions are for use with the 5060XY Outdoor Basketball Backstop, with 5⁹/₁₆" O.D. Straight Post and two 6'0" Adjustable Height Extensions. For other models, consult separate instructions.

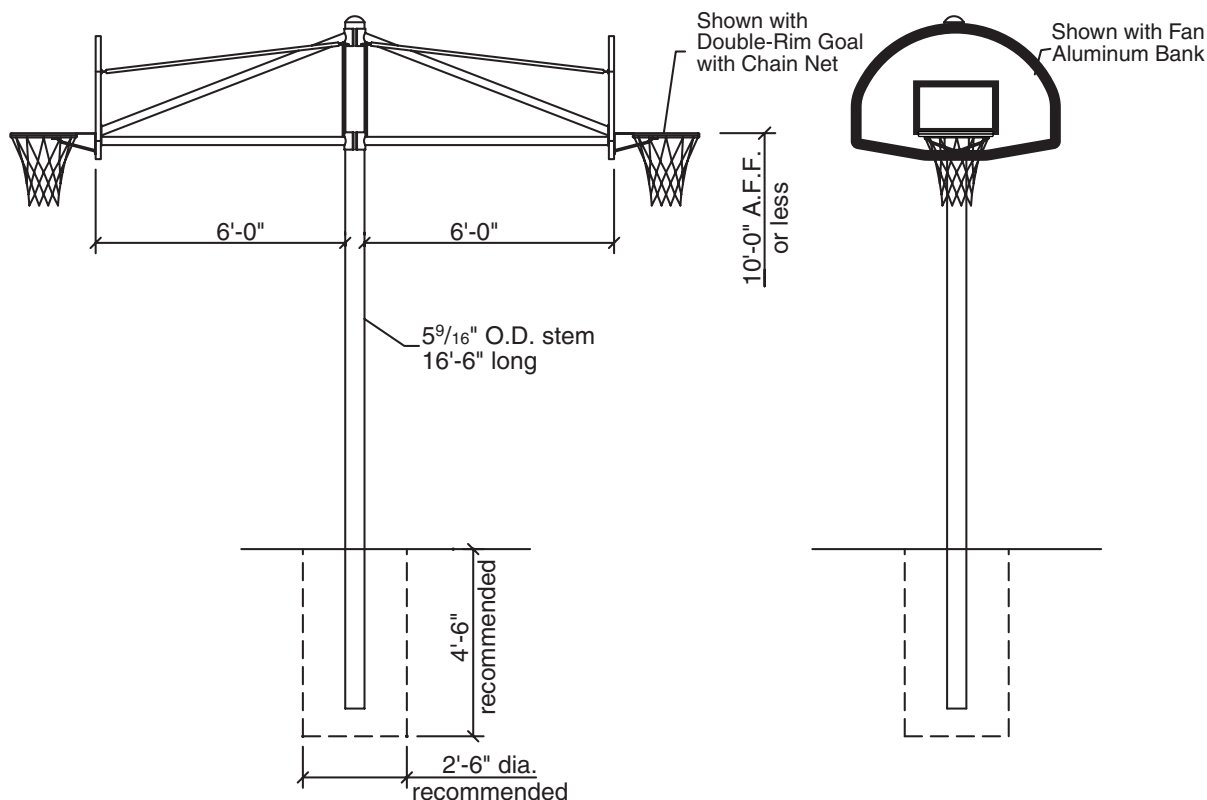

Installation Instructions

- ① Evacuate hole on centerline of court 2'6" diameter and 4'6" deep. Center of the hole is 6'2²⁵/₃₂" from the faces of banks.
- ② Install and brace post in hole with a minimum of 12'6" of post extending above court level.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Bolt the extension frames to the post using half clamps.
- ⑤ Attach the goals, backboards and braces to the extension frames.
- ⑥ Raise extension assemblies to desired height and square to the court.
- ⑦ Adjust the braces so the backboards are plumb.



765-987-7999
866-637-5611
411 S. Pearl St.
Spiceland IN 47385 USA
www.progressivescg.com