


Installation Instructions

5064XY Outdoor Basketball Backstop by Progressive

Please Note: These instructions are for use with the 5064XY Outdoor Basketball Backstop, with 4½" O.D. Gooseneck Post and 5'0" Extension. For other models, consult separate instructions.

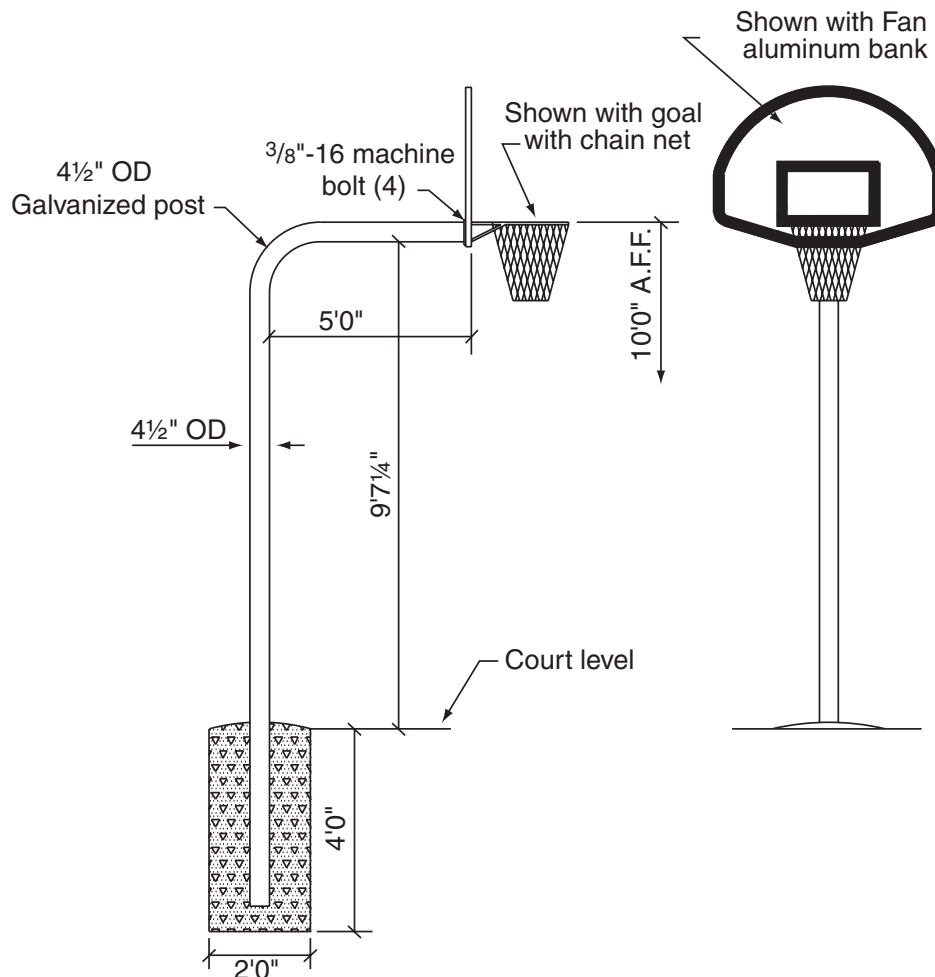

Installation Instructions

- ① Evacuate hole on centerline of court 24" diameter and 4'0" deep. Center of the hole is 5'1¾" from the face of bank.
- ② Install and brace post in hole. Hold 9'7¼" vertical dimension from underside of horizontal tube and plumb.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Install backboard, goal and net.

