


Installation Instructions

5065XY Outdoor Basketball Backstop by Progressive

Please Note: These instructions are for use with the 5065XY Outdoor Basketball Backstop, with 5⁹/₁₆" O.D. Gooseneck Post and 6'0" Extension. For other models, consult separate instructions.

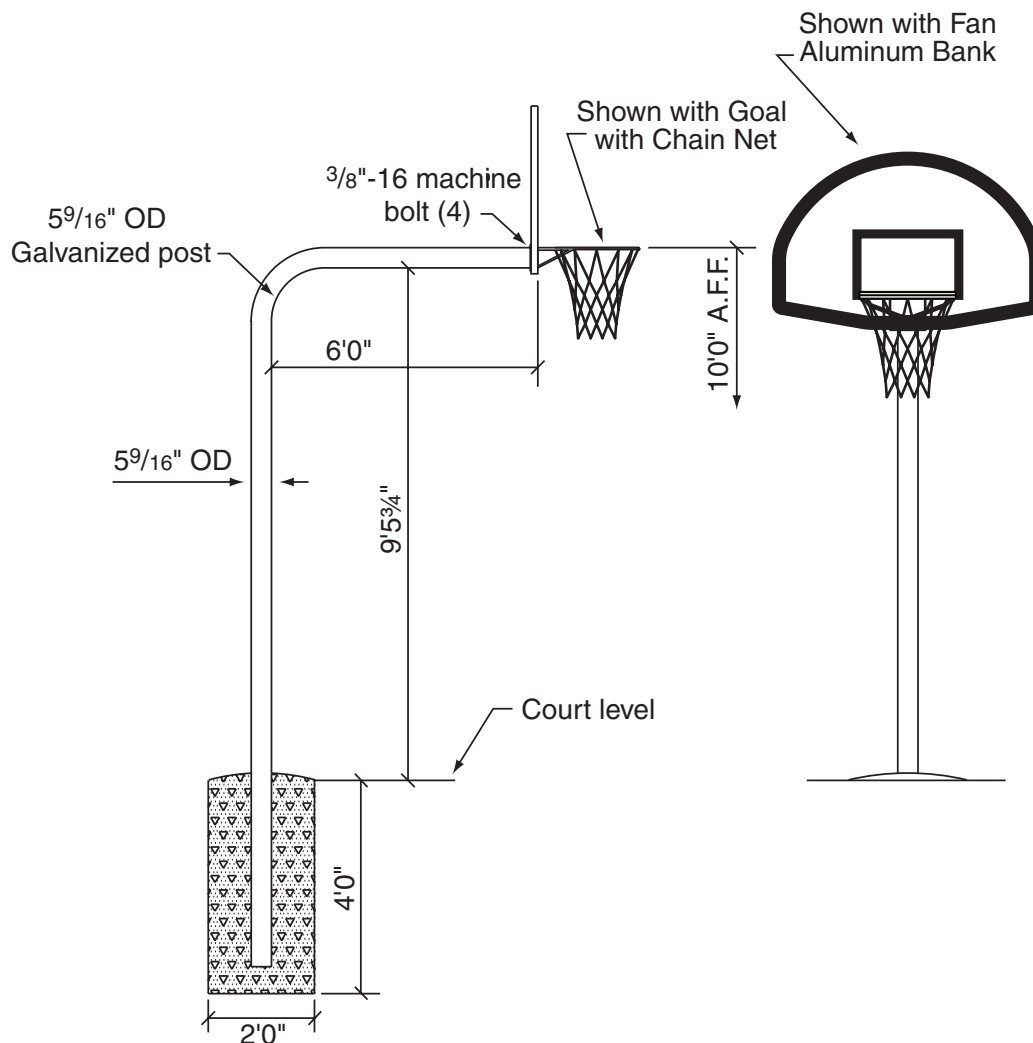

Installation Instructions

- ① Evacuate hole on centerline of court 24" diameter and 4'6" deep. Center of the hole is 6'2²⁵/₃₂" from the face of bank.
- ② Install and brace post in hole. Hold 9'5³/₄" vertical dimension from underside of horizontal tube and plumb.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Install backboard, goal and net.



765-987-7999
866-637-5611
411 S. Pearl St.
Spiceland IN 47385 USA
www.progressivescg.com