


# Installation Instructions

## 5066XY Outdoor Basketball Backstop by Progressive

**Please Note:** These instructions are for use with the 5066XY Outdoor Basketball Backstop, with 3½" O.D. Straight Post and 3'0" Adjustable Height 3½" Extension. For other models, consult separate instructions.

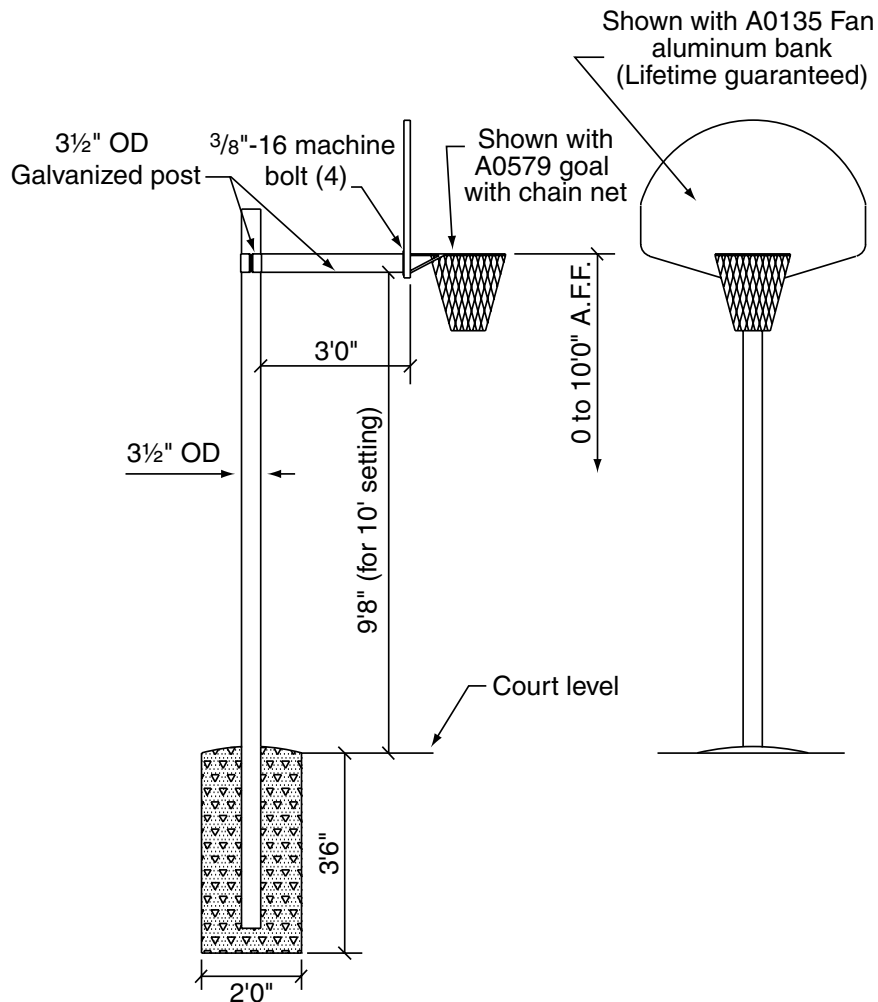

### Installation Instructions

- ① Evacuate hole on centerline of court 24" diameter and 3'6" deep. Center of the hole is 3'1¼" from the face of bank.
- ② Install and brace post in hole. Hold 9'8" vertical dimension from underside of horizontal tube and plumb.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Install backboard, goal and net.



765-987-7999  
866-637-5611  
411 S. Pearl St.  
Spiceland IN 47385 USA  
www.progressivescg.com