


Installation Instructions

5067XY Outdoor Basketball Backstop by Progressive

Please Note: These instructions are for use with the 5067XY Outdoor Basketball Backstop, with 4½" O.D. Straight Post and 4'0" Adjustable Height 4½" Extension. For other models, consult separate instructions.

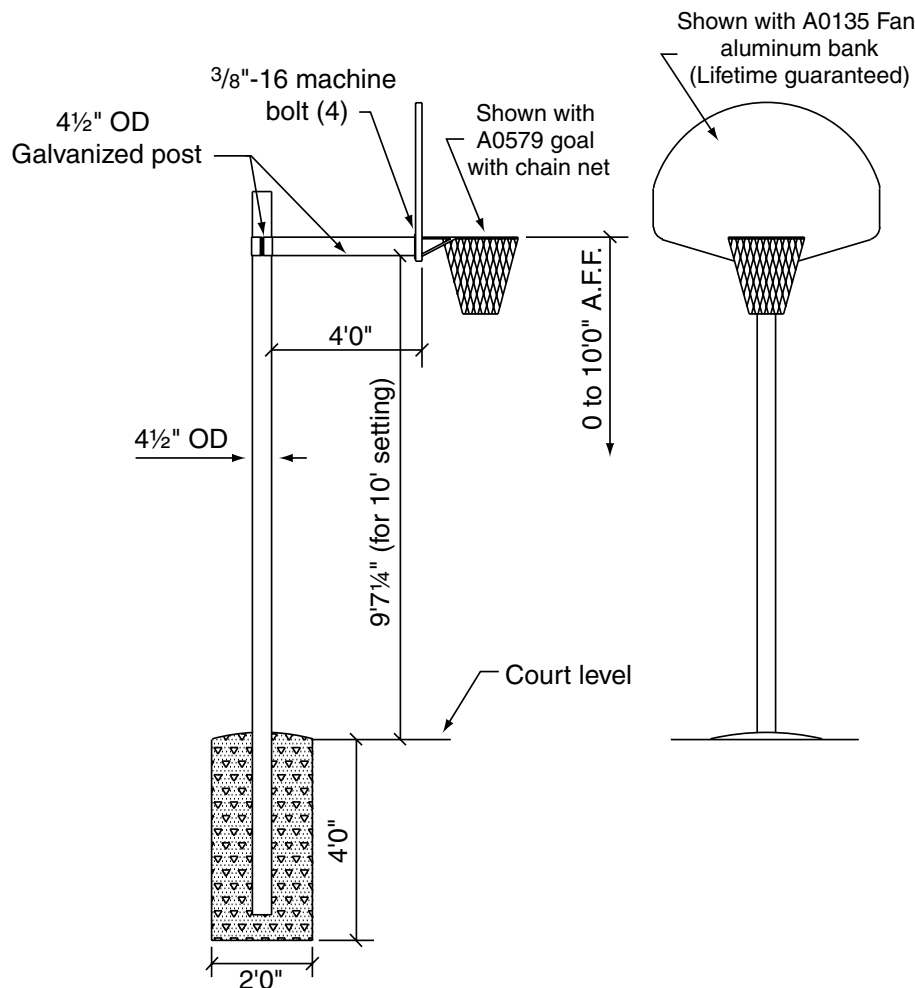

Installation Instructions

- ① Evacuate hole on centerline of court 24" diameter and 4'0" deep. Center of the hole is 4'1¾" from the face of bank.
- ② Install and brace post in hole. Hold 9'7¼" vertical dimension from underside of horizontal tube and plumb.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Install backboard, goal and net.



765-987-7999
 866-637-5611
 411 S. Pearl St.
 Spiceland IN 47385 USA
www.progressivescg.com