


Installation Instructions

5069XY Outdoor Basketball Backstop by Progressive

Please Note: These instructions are for use with the 5069XY Outdoor Basketball Backstop, with 4½" O.D. Straight Post and two 4'0" Adjustable Height Extensions. For other models, consult separate instructions.

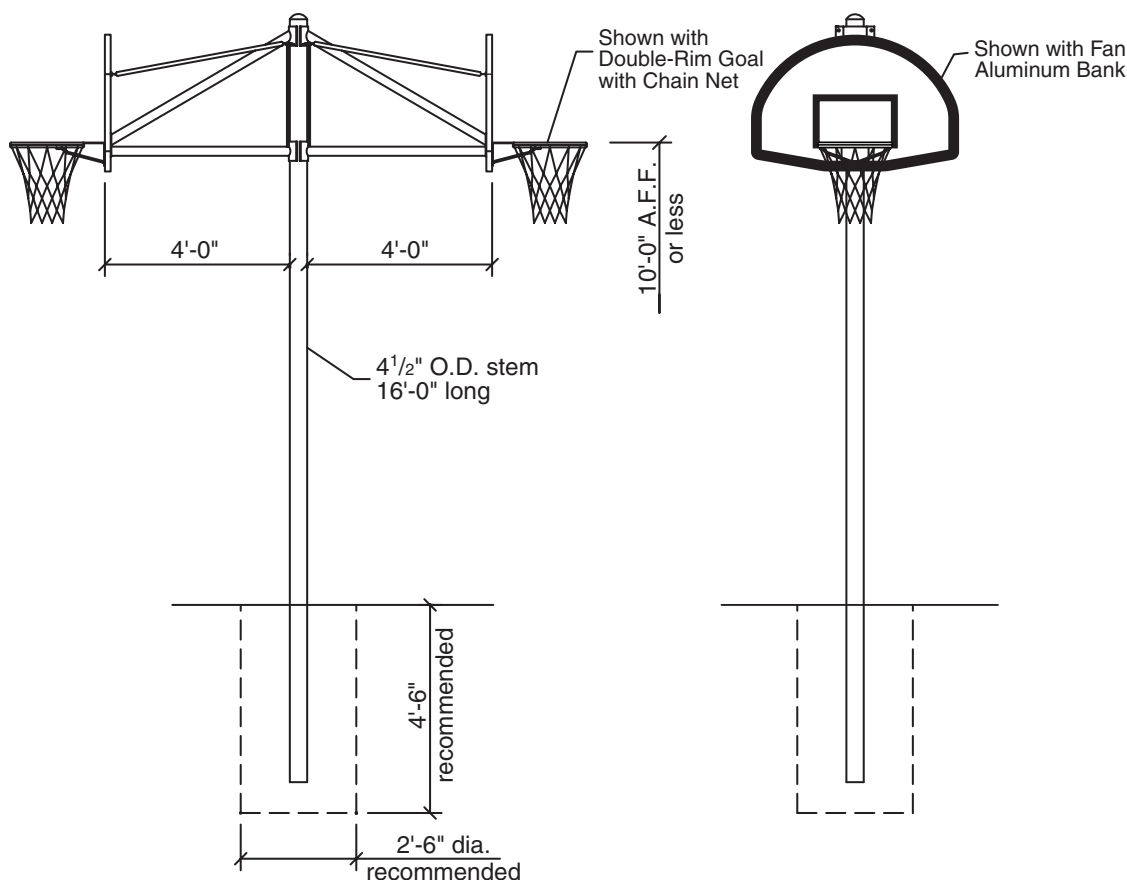

Installation Instructions

- ① Evacuate hole on centerline of court 2'6" diameter and 4'6" deep. Center of the hole is 4'1¾" from the faces of banks.
- ② Install and brace post in hole with a minimum of 12'6" of post extending above court level.
- ③ Fill hole with fairly dry concrete (minimum 2000 psi) mixture. Allow concrete to dry at least 48 hours.
- ④ Bolt the extension frames to the post using half clamps.
- ⑤ Attach the goals, backboards and braces to the extension frames.
- ⑥ Raise extension assemblies to desired height and square to the court.
- ⑦ Adjust the braces so the backboards are plumb.



If you encounter any difficulty installing or servicing your 5069XY Outdoor Basketball Backstop by Progressive, call your dealer or Progressive Sports Construction Group (765) 987-7999; or fax (765) 987-7142.